


## MEASURE FORMALDEHYDE SOURCES WITH UNMATCHED SENSITIVITY AND ACCURACY




- Superior sensitivity: <1 ppb CH<sub>2</sub>O
- Real-time analytics, statistics
- Ultra-high sensitivity and accuracy
- Low drift via thermally stabilized optical core
- Data in .kml format for viewing in Google Earth™
- Maintenance-free sensor, user-serviceable filters

The **MIRA Ultra CH<sub>2</sub>O** leverages mid-infrared (mid-IR) technology to deliver industry-leading formaldehyde quantification with 1 ppb/30s sensitivity. Designed for both laboratory research and field investigations, the analyzer combines low power draw with a compact, lightweight form factor, enabling portable or fixed rackmount deployments and continuous, unattended monitoring.

Formaldehyde is a hazardous VOC and known human carcinogen found in industrial, indoor, and environmental settings. The MIRA Ultra CH<sub>2</sub>O provides the precision, responsiveness, and versatility required for regulatory compliance, exposure assessment, and environmental monitoring — helping protect public health and ecosystems.

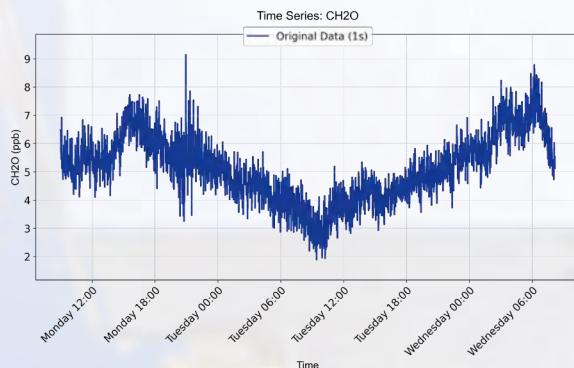

A typical time series from MIRA Ultra CH<sub>2</sub>O analyzer showing CH<sub>2</sub>O averaged over 1 second, demonstrating stability over several days.

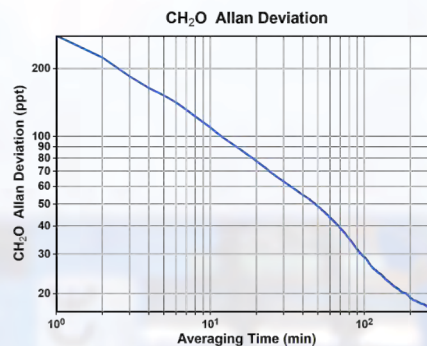

Allan deviation plot for the MIRA Ultra Formaldehyde analyzer, showing ppt sensitivity.

# INDUSTRY-LEADING SUB PPB ACCURACY AND SENSITIVITY

Metric	Specification
Measurement Method	Mid-Infrared Direct Laser Absorption Spectroscopy
Sensitivity (1 $\sigma$ ) at 1 Hz	CH <sub>2</sub> O: <1 ppb/30s
Sensitivity (1 $\sigma$ ) at 5 Hz	CH <sub>2</sub> O: <450 ppt/30s
Temperature / Humidity	10-35° C, 10 to 95% RH (non-condensing)
Measurement Range*	CH <sub>2</sub> O: 1 ppb to 250 ppm
Flow Rate	0.37 to 0.73 L/min
Size	37.3 cm W (14.7") x 30.2 cm H (11.9") x 18.6 cm D (7.3")
Weight	6.4 kg (14.1 lbs.), 6.8 kg (15 lbs.) with battery
Power Consumption	27 W steady state, 50 W at startup
Voltage / Current	12-15 VDC 4.2 A, 100-240 VAC 0.50 A (50-60 Hz)
Interface / Outputs	Wi-Fi, USB-A, USB to DB9 RS232 adapter (optional Ethernet, analog out)
Memory	32 GB (expandable)
Aquisition Rate	1 Hz

Metric	Ultra Rackmount Specification
Size / Weight	48.3 cm W (19.0") x 17.7 cm H (7.0") x 27.9 cm D (11.0") / 8.8 kg (19.4 lbs.)
Power Consumption	26 W steady state, 50 W at startup
Voltage / Current	100-240 VAC 0.50 A (50-60 Hz)
Interface / Outputs	Wi-Fi, USB-A, DB9 RS232, Ethernet (optional analog out)


\*Linear measurement range. Operational range configurable for specific applications.

Included:	Scrubber	Optional:	Internal Battery
Rugged Shipping Case	Tablet	Ethernet	Nafion Dryer
Stainless Steel Sampling	12 V and 110/240 V Power Plug	Advanced GPS	Anemometer

Offered in both Rackmount and Portable configurations, MIRA Ultra systems ensure stable, low-drift performance with a temperature- and pressure-controlled sensor core, delivering exceptional accuracy and reproducibility for simultaneous gas measurements. This stability extends calibration intervals and, in some cases, eliminates the need for calibration. The system features two programmable sampling ports for calibration, re-zeroing, or differential measurements, supporting a wide variety of applications.

## Core Sensor Technology

MIRA series analyzers combine Aeris' patented multipass cell technology with mid-IR solid-state lasers and custom electronics to achieve superior sensitivity and accuracy in an extremely robust and compact platform. The proprietary sensor engine used in every MIRA analyzer uniquely achieves a long absorption path length in an extremely small volume resulting in a fast response time with reduced pumping and power requirements.

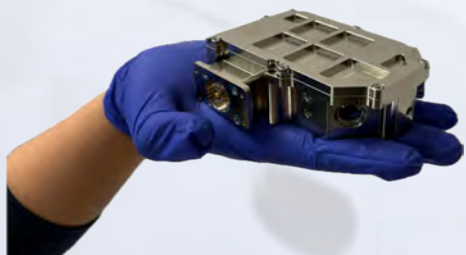


MIRA's compact optical core achieves a 13 meter path length in a 60 cc volume.

## The Power of Mid-infrared

Spanning wavelengths from 2.5 to 5 micrometers ( $\mu\text{m}$ ), the Aeris mid-IR technology achieves the same or superior short-term sensitivity as fragile NIR cavity-based techniques. The robust design of the mid-IR core is well suited for a wide range of applications including airborne analysis and environmental monitoring.

Mid-infrared vs near-infrared absorption line strength

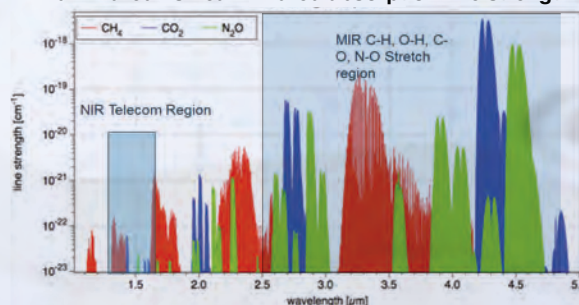

The Mid-infrared absorption spectrum of common greenhouse gases showing an increase of several orders of magnitude over their absorption in the NIR.



**Aeris Technologies, Inc.** provides ultrasensitive gas analyzers for trace gas monitoring applications. Aeris is redefining the state of the art in laser-based gas analysis systems, reaching unparalleled size, weight, power, and cost milestones.

Aeris Technologies, Inc. 26252 Eden Landing Road, Hayward CA 94545  
PH 650.620.9421 FAX 9451  
www.aerissensors.com

